

THANK YOU FOR YOUR NEW SOLVING PRODUCTS PURCHASE



SOLVING PRODUCTS

CONTACT SOLVING PRODUCTS LLC

Phone..... (855) 661-9124
Email Help@Solvingproducts.com
Website www.SolvingProducts.com

UNBOXED ADVANTAGE

WHAT IS UNBOXED?

Solving Products LLC offers brand-new products direct from manufacturer for consumers at low economical prices. Shipped in smaller, environmentally responsible packaging to reduce waste are only a few cost saving methods used to create the Unboxed Advantage.

- > Customer oriented with exceptionally low consumer pricing
- > Streamlined package reduces waste resulting in low environmental impact
- > 1-Year extended service plan provided by Solving Products LLC
- > Customer support available over the phone or visit our website

CUSTOMER SUPPORT

Solving Products customer support team is knowledgeable and ready to help. Available weekdays and weekends 24/7 by phone.

PLEASE DO NOT CONTACT ORIGINAL MANUFACTURER DIRECTLY

Phone (855) 661-9124
Email Help@Solvingproducts.com
Website www.SolvingProducts.com



SOLVING PRODUCTS

IMPORTANT: PLEASE CHARGE COMPLETELY BEFORE FIRST USE

UNBOXED

NEW S9311

ELECTRIC WET & DRY SHAVER OPERATION GUIDE AND EXTENDED SERVICE PLAN

NEW ITEM WAS CAREFULLY PACKAGED BY SOLVING PRODUCTS, LLC, CERTIFIED RETAIL PARTNER OF PHILIPS NORELCO

PHILIPS
NORELCO



IMPORTANT SAFETY NOTE

When using an electric product, basic precautions should always be followed. To reduce the risk of electric shock: The power plug and the accessories connected to it are not for immersion or for use in shower. Do not use an extension cord with this product. Unplug and remove power cord before cleaning. The batteries used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate. To reduce the risk of burns, fire, electric shock, or injury to persons: Close supervision is required when this product is used by, on, or near children, or persons with limited physical, sensory, or mental capabilities or invalids. Use this product only for its intended household use as described in this manual. Do not use attachments not recommended by Philips North America LLC. Never operate this product if it has a damaged power cord or charging plug, if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in. Keep the cord and power plug dry at all times. Do not handle with wet hands. Only use the power plug, USB plug and other accessories supplied with the product.


OPERATION OVERVIEW

Buttons explained for new Philips Norelco S9311 shaver.

CHARGING & POWER

Charging, recharging or storing at temperatures below 40°F/4.5°C or higher than 95°F/35°C adversely affects lifetime of batteries

1. Charging or recharging requires one full hour
2. A fully charged shaver has a shaving time of up to 50 minutes.
3. You may recharge when the display indicates the battery is almost empty.
4. This shaver will not operate corded directly from the electrical outlet

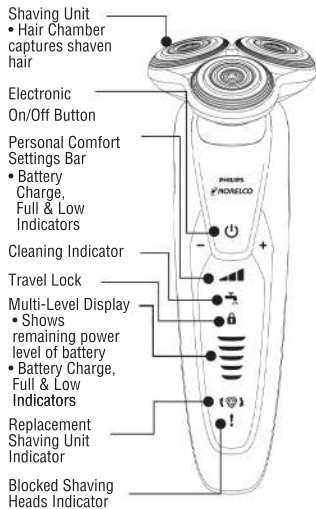

SYSTEM DISPLAY

BATTERY CHARGE INDICATOR

- | | |
|---------------------|---------------------------------------|
| A. Charging | E. Personal Comfort Settings |
| B. Full Charge | F. Replacement Shaving Unit Indicator |
| C. Battery Low | G. Blocked Shaving Heads Indicator |
| D. Remaining Charge | H. Cleaning Indicator |

CLEANING

1. Always clean your shaver after each use
2. Regular cleaning guarantees better shaving results.
3. Never clean, remove or replace shaving unit while motor is on.
4. Do not apply pressure to shaving head combs. Do not touch shaver heads with hard objects as this may dent or damage precision-made slotted combs.
5. Do not use shaver if shaving head combs are damaged or broken. Facial injury may occur
6. Do not use abrasives, scourers or aggressive liquids such as gasoline or acetone to clean the shaver.
7. Regular cleaning guarantees better shaving results.
8. While rinsing shaving heads, water may drip out of the base of shaver. This is a normal occurrence.
9. For best results rinse the shaving unit by running under hot water for a few minutes.
10. Pull the top portion of the shaving unit straight off the shaver.
11. Rinse the hair chamber under the tap.
12. Rinse the shaving unit under hot tap water
- 13 Carefully shake off excess water and let the shaving unit air dry completely.

DRY SHAVING

- 1 Switch on the appliance.
- 2 Move the shaving heads over your skin in circular movements.
Note: Circular movements provide better shaving results than straight movements.
- 3 Stretch your skin with your free hand so blades can lift and cut whiskers. Gently press shaver to skin so the floating heads can follow the contours of your face.

WET SHAVING

You can also use this appliance on a wet face with shaving foam or shaving gel.

To shave with shaving foam or shaving gel, follow the steps below:

- 1 Apply some water to your skin.
- 2 Apply shaving foam or shaving gel to your skin.
- 3 Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin.
- 4 Switch on the appliance.
- 5 Move the shaving heads over your skin in circular movements.
Note: Rinse the shaving unit regularly to ensure that it continues to glide smoothly over your skin.
- 6 Dry your face and thoroughly clean the shaver after each use.
- 7 Place the shaver in the SmartClean System to protect heads.

AVAILABLE ACCESSORIES

NOTE: THE ACCESSORIES SUPPLIED MAY VARY FOR DIFFERENT PRODUCTS. THE PACKAGE SHOWS ACCESSORIES THAT HAVE BEEN SUPPLIED WITH YOUR PRODUCT.

S9311 SHAVER, CHARGER, OPERATION GUIDE, 1-YEAR EXTENDED SERVICE.

