

THANK YOU FOR YOUR NEW SOLVING PRODUCTS PURCHASE



CONTACT SOLVING PRODUCTS LLC

Phone..... (855) 661-9124
Email Help@Solvingproducts.com
Website www.SolvingProducts.com

UNBOXED ADVANTAGE

WHAT IS UNBOXED?

Solving Products LLC offers brand-new products direct from manufacturer for consumers at low economical prices. Shipped in smaller, environmentally responsible packaging to reduce waste are only a few cost saving methods used to create the Unboxed Advantage.

- > Customer oriented with exceptionally low consumer pricing
- > Streamlined package reduces waste resulting in low environmental impact
- > 1-Year extended service plan provided by Solving Products LLC
- > Customer support available over the phone or visit our website

CUSTOMER SUPPORT

Solving Products customer support team is knowledgeable and ready to help. Available weekdays and weekends 24/7 by phone.

PLEASE DO NOT CONTACT ORIGINAL MANUFACTURER DIRECTLY

Phone (855) 661-9124
Email Help@Solvingproducts.com
Website www.SolvingProducts.com



IMPORTANT: PLEASE CHARGE COMPLETELY BEFORE FIRST USE

UNBOXED

NEW S3570

ELECTRIC CORDLESS/ CORD SHAVER OPERATION GUIDE AND EXTENDED SERVICE PLAN

NEW ITEM WAS CAREFULLY PACKAGED BY SOLVING PRODUCTS, LLC, CERTIFIED RETAIL PARTNER OF PHILIPS NORELCO



IMPORTANT SAFETY NOTE

When using an electric product, basic precautions should always be followed. To reduce the risk of electric shock: The power plug and the accessories connected to it are not for immersion or for use in shower. Do not use an extension cord with this product. Unplug and remove power cord before cleaning. The batteries used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate. To reduce the risk of burns, fire, electric shock, or injury to persons: Close supervision is required when this product is used by, on, or near children, or persons with limited physical, sensory, or mental capabilities or invalids. Use this product only for its intended household use as described in this manual. Do not use attachments not recommended by Philips North America LLC. Never operate this product if it has a damaged power cord or charging plug, if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in. Keep the cord and power plug dry at all times. Do not handle with wet hands. Only use the power plug, USB plug and other accessories supplied with the product.

OPERATION OVERVIEW

Buttons explained for new Philips Norelco S3570 shaver.

CHARGING & POWER

To prolong shaver lifespan charge before first use and only when indicated. Power shaver on or off by pressing on/off button once.

1. Power shaver off by pressing on/off button once
2. Connect shaver to supplied AC charger only and any 100V-240V AC outlet
3. Shaver display will indicate battery is charging
4. Unplug shaver when charge indicator flashes three continuous white lights

LED DISPLAY

BATTERY CHARGE INDICATOR

- | | |
|--------------------------------------|---------------------------|
| A. Charging Indicator | B. Full Charge Indicator |
| C. Low Battery Indicator | D. Quick Charge Indicator |
| E. Shaver Head Replacement Indicator | |

Shaver Head Assembly

Protective Cap


Individually Floating Heads

Shaver Head Release Button
• Hair Chamber captures shaven hair

Electronic On/Off Button

Shaver Head Replacement Indicator

LED Charge Indicators
• Battery Charge, Full, Low & Quick Charge Indicators

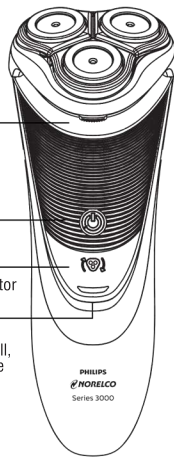

CLEANING

- Always clean your shaver after each use.
- Always switch shaver OFF, unplug and remove power cord before cleaning.
- Never clean, remove or replace head assembly while motor is on.
- Do not apply pressure to combs. Do not touch shaving heads with hard objects as this may dent or damage precision-made slotted combs.
- Do not use shaver if combs are damaged or broken. Facial injury may occur.
- Do not use compressed air, abrasives, scourers or liquids such as acetone to clean the shaver.
- Do not immerse shaver in water.
- While rinsing shaving heads, water may drip out of the base of shaver. This is a normal occurrence.
- Regular cleaning guarantees better shaving results.
- Press the Release Button to open the shaving unit.
- Clean inside shaver heads and hair chamber by running under hot water.
- Clean outside of shaving unit by running under hot water.
- Open shaving unit again and leave open to air dry.

AFTER EACH USE: TRIMMER

- Turn shaver OFF.
- Push down spring-release trimmer switch.
- Clean trimmer with the short-bristled side of the brush every time you use it.
- Lubricate the trimmer teeth with one drop of mineral oil every 6 months.
- Close trimmer by pressing trimmer down.

REPLACING THE SHAVING HEADS

1. Turn shaver OFF, remove the charging plug from the outlet and power cord from the shaver.
 2. Press the Shaver Head Release Button to open the Shaver Head Assembly.
 3. Pull the shaving unit off the shaver.
 4. Turn the lock counterclockwise to unlock (A) and remove the retaining frame (B).
 5. Remove the shaver heads and place the new shaving heads in the shaving unit.
 6. Replace the frame and turn the lock clockwise until it locks into place.
 7. Insert the notch of the shaving unit into the slot in the top of the shaver (1) and then close the shaving unit (2).
 8. Press and hold the on/off button for at least 5 seconds to reset. The orange shaver head replacement indicator symbol will go out.
- **NOTE:** If the shaving unit does not close smoothly, make sure you inserted the shaving heads properly and that the retaining frame is locked.

AVAILABLE ACCESSORIES

NOTE: THE ACCESSORIES SUPPLIED MAY VARY FOR DIFFERENT PRODUCTS. THE PACKAGE SHOWS ACCESSORIES THAT HAVE BEEN SUPPLIED WITH YOUR PRODUCT.

S3570 SHAVER, CHARGER, OPERATION GUIDE, 1-YEAR EXTENDED SERVICE.

