

THANK YOU FOR YOUR NEW SOLVING PRODUCTS PURCHASE



CONTACT SOLVING PRODUCTS LLC

Phone..... (855) 661-9124
Email Help@Solvingproducts.com
Website www.SolvingProducts.com

UNBOXED ADVANTAGE

WHAT IS UNBOXED?

Solving Products LLC offers brand-new products direct from manufacturer for consumers at low economical prices. Shipped in smaller, environmentally responsible packaging to reduce waste are only a few cost saving methods used to create the Unboxed Advantage.

- > Customer oriented with exceptionally low consumer pricing
- > Streamlined package reduces waste resulting in low environmental impact
- > 1-Year extended service plan provided by Solving Products LLC
- > Customer support available over the phone or visit our website

CUSTOMER SUPPORT

Solving Products customer support team is knowledgeable and ready to help. Available weekdays and weekends 24/7 by phone.

PLEASE DO NOT CONTACT ORIGINAL MANUFACTURER DIRECTLY

Phone (855) 661-9124
Email Help@Solvingproducts.com
Website www.SolvingProducts.com



IMPORTANT: PLEASE CHARGE COMPLETELY BEFORE FIRST USE

UNBOXED

NEW S5074

ELECTRIC WET & DRY SHAVER OPERATION GUIDE AND EXTENDED SERVICE PLAN

NEW ITEM WAS CAREFULLY PACKAGED BY SOLVING PRODUCTS, LLC, CERTIFIED RETAIL PARTNER OF PHILIPS NORELCO



IMPORTANT SAFETY NOTE

When using an electric product, basic precautions should always be followed. To reduce the risk of electric shock: The power plug and the accessories connected to it are not for immersion or for use in shower. Do not use an extension cord with this product. Unplug and remove power cord before cleaning. The batteries used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate. To reduce the risk of burns, fire, electric shock, or injury to persons: Close supervision is required when this product is used by, on, or near children, or persons with limited physical, sensory, or mental capabilities or invalids. Use this product only for its intended household use as described in this manual. Do not use attachments not recommended by Philips North America LLC. Never operate this product if it has a damaged power cord or charging plug, if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in. Keep the cord and power plug dry at all times. Do not handle with wet hands. Only use the power plug, USB plug and other accessories supplied with the product.

OPERATION OVERVIEW


CHARGING & POWER

1. Charging, recharging or storing at temperatures below 40°F/4,5°C or higher than 95°F/35°C adversely affects lifetime of batteries.
2. Charging requires one full hour.
3. A fully charged shaver has a shaving time of up to 40 minutes.
4. You may recharge when the display indicates the battery is almost empty
5. This shaver will not operate corded directly from the electrical outlet.
6. Do not charge the shaver in a pouch.
7. Connect cord directly to shaver and connect the power plug into any 100V to 240V AC outlet. Use only the power cord provided.

LED DISPLAY

BATTERY CHARGE INDICATOR

- A. Charging Indicator
- C. Low Battery Indicator
- E. Replacement Shaving Heads Indicator
- G. Travel Lock

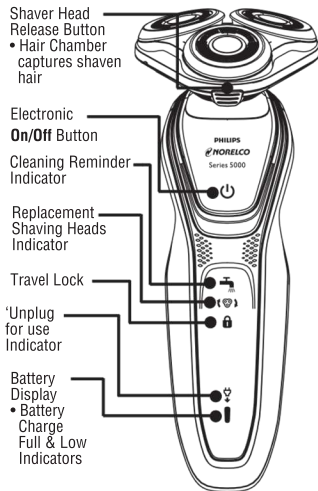

- B. Full Charge Indicator
- D. 'Unplug For Use' Indicator
- F. Cleaning Reminder Indicator

CLEANING THE SHAVING UNIT

- Always clean your shaver after each use.
- For best results rinse the shaving unit by running under hot water for a few minutes.
- Press the Shaver Head Release Button to open the shaving unit.
- Rinse the shaving head holder under hot tap water for 30 seconds.
- Carefully shake off excess water and let the shaving head holder air dry completely
- Close the shaving head holder. You will hear a 'click'.

Shaving

Dry shaving :- 1) Switch on the appliance.

2) Move the shaving heads over your skin incircular movements to catch all hairs growing indifferent directions. Exert gentle pressure for aclose comfortable shave
Note: Do not press too hard, this can cause skinirritation.

3) Clean the appliance after use.

Wet shaving:- You can also use this appliance on a wet face withshaving foam or shaving gel.

TRAVEL LOCK

1. Press the ON/OFF button for 3 seconds.
- The travel lock symbol lights up continuously and the lock symbol blinks.
2. The travel lock has now been activated.

1. Press the ON/OFF button for 3 seconds.
2. The lock symbol blinks and then lights up continuously.
The shaver is now ready for use.

REPLACING THE SHAVING HEADS

1. Press the shaver head release button to open the shaving unit.
2. Pull the shaving head holder off the bottom part of the shaving unit.
3. Turn the retaining ring counterclockwise
4. Remove the shaving heads from the shaving head holder and discard.
5. Place a new shaving head in the holder.
6. Hold the shaving head holder in your hand and place the retaining ring on the shaving head holder
7. Repeat this process for the other two cutters and combs.
8. Reinsert the hinge of the shaving head holder into the slot of the shaving unit.
Close the shaving head holder
9. To reset the shaver, press and hold the On/Off button for approximately 7 seconds. shaving head holder and discard.

AVAILABLE ACCESSORIES

NOTE: THE ACCESSORIES SUPPLIED MAY VARY FOR DIFFERENT PRODUCTS. THE PACKAGE SHOWS ACCESSORIES THAT HAVE BEEN SUPPLIED WITH YOUR PRODUCT.

S5074 SHAVER, CHARGER, OPERATION GUIDE, 1-YEAR EXTENDED SERVICE.

